



Manual

Compressed Air Sprayer 50300 FPV/FPE Model

Instructions for Use – Manual Operation


- Fill the bottle up to the “Max” indicator.
- Insert pump assembly into the bottle, and screw-on very tightly, so the seals can maintain sufficient pressure.
- Extend pump plunger and stroke 20 – 30 times.
- For spraying, press the trigger. Slowly turn the nozzle to adjust spray pattern from fine mist to jet.
- Always release pressure in the unit before storage.
- Immediately after use, clean the pump sprayer with clear water.
- Occasionally lubricate the pump barrel with a few drops of light oil.

Warranty

Sprayers carry a limited Warranty, which is limited to replacement of defective part(s) only. Damage attributable to improper use, faulty maintenance, the effects of chemicals or normal wear and tear (Seals/o-rings) is excluded from the Warranty.

If defective, the sprayer(s) should be returned to FBS for examination with transportation prepaid. If defects are covered by the Warranty, the least expensive inbound/outbound charges will be borne by FBS/Manufacturer. All returned and repairable sprayers not covered by the Warranty will be repaired/reconditioned according to the repair fee/schedule, and charges borne by the customer.

For more information visit our web site at www.fbsdistribution.com and consult with FBS for chemical compatibility before using the sprayer.

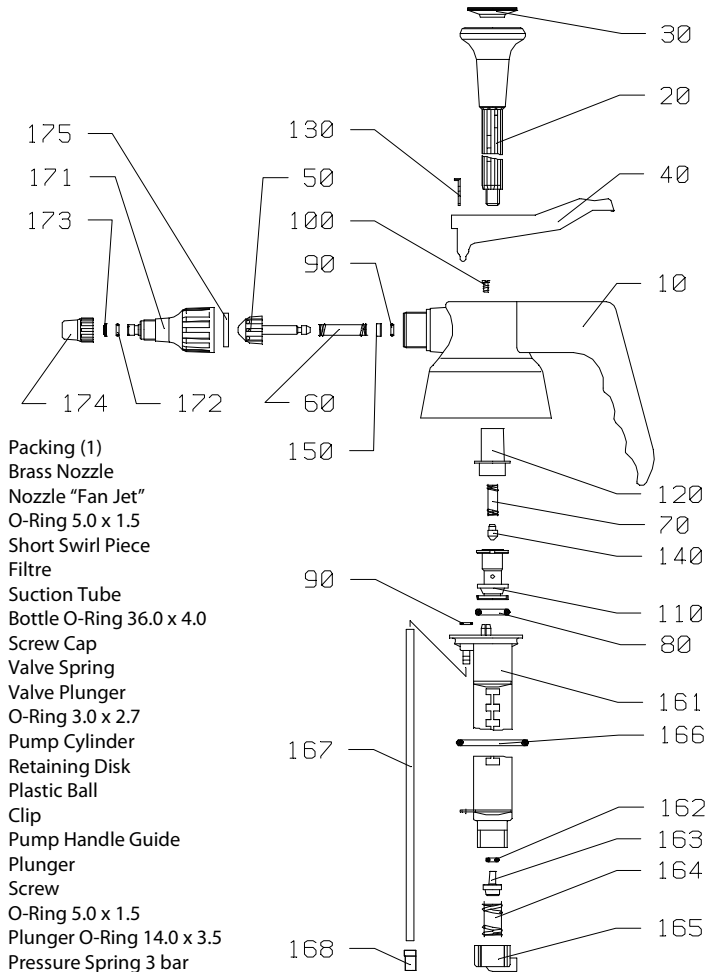

- | | |
|-------|---------------------------|
| 175 | Packing (1) |
| 174 | Brass Nozzle |
| 173 | Nozzle “Fan Jet” |
| 172 | O-Ring 5.0 x 1.5 |
| 171 | Short Swirl Piece |
| 168 | Filter |
| 167 | Suction Tube |
| 166 | Bottle O-Ring 36.0 x 4.0 |
| 165 | Screw Cap |
| 164 | Valve Spring |
| 163 | Valve Plunger |
| 162 | O-Ring 3.0 x 2.7 |
| 161 | Pump Cylinder |
| 150 | Retaining Disk |
| 140 | Plastic Ball |
| 130 | Clip |
| 120 | Pump Handle Guide |
| 110 | Plunger |
| 100 | Screw |
| 90 | O-Ring 5.0 x 1.5 |
| 80 | Plunger O-Ring 14.0 x 3.5 |
| 70 | Pressure Spring 3 bar |
| 60 | Spring |
| 50 | Swirl Cone |
| 40 | Trigger |
| 20/30 | Pump Handle with Lid |
| 10 | Sprayer Cup |



Manuel

Vaporisateur à air comprimé Modèle 50300 FPV/FPE

Mode D'emploi

- Remplissez la bouteille jusqu'à l'indicateur "max".
- Insérez la pompe et vissez bien serré de façon à ce que les joints étanches maintiennent une pression suffisante.
- Tirez le levier de la pompe et actionnez 30 à 40 fois.
- Pour vaporiser, desserrer la douille de sécurité (n° 180) et presser la manette. Tourner doucement le bouchon pour ajuster le style de vaporisation voulue: de la légère brume au jet.
- Toujours libérer la pression avant de ranger.
- Lubrifiez le baril de la pompe avec quelques goutte d'huile de temps à autre.

Garantie

Les pulvérisateurs bénéficient d'une Garantie limitée au remplacement de pièce(s) défectueuse(s) seulement. Toute détérioration due à un usage inapproprié, mauvais entretien, effet de produits chimiques ou usure normale (joints d'étanchéité/joints toriques) est exclue de la Garantie.

En cas de défaut, retournez-le(s) pulvérisateur(s) défectueux à FBS pour vérification, par envoi prépayé. Si le défaut est couvert par la Garantie, les frais d'expédition/réexpédition minimaux seront pris en charge par FBS ou le Fabricant.

Tout pulvérisateur retourné et réparable, et dont le défaut n'est pas couvert par la Garantie sera réparé/reconditionné selon les tarifs de réparation/frais d'envoi prévus, lesquels seront à la charge du client.

Consultez notre site web www.fbsdistribution.com

